


# ASSEMBLY INSTRUCTIONS

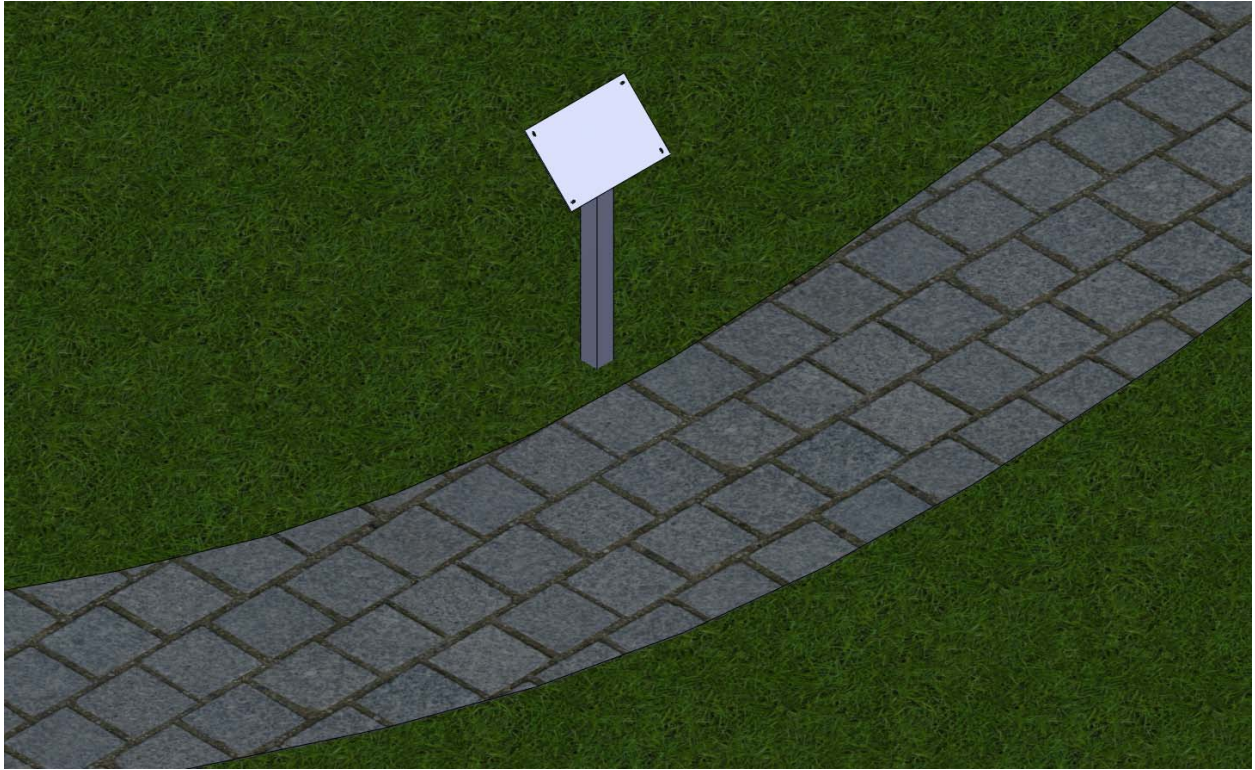

## SINGLE PEDESTAL IN-GROUND

### Step #1

After locating the proper location (before digging hole call your local diggers hot line to mark for any utility lines in-ground) dig a hole to proper depth of between 18" to 24" deep, check to make sure lower edge of the sign will be at 28" to 32" above the grade surface.

### Step #2

Insert an 6" to 8" piece of 1/2 rebar in hole at bottom of post for a more secure installation (if needed)

### Step #3

Place pedestal in hole fill or remove as needed to set to proper depth (as noted in Step #1) level in all directions and fill hole with proper media (before selecting media check local code)

